

Digitale kompaktkameraer

Kompatibilitetsoversigt for tilbehør

Forår/sommer 2011

	PowerShot G12 / G11 / G10	PowerShot G9	PowerShot S95 / S90	PowerShot SX30 IS	PowerShot SX1 IS / SX10 IS / SX20 IS	PowerShot SX230 HS / SX220 HS / SX210 IS / SX200 IS	PowerShot SX130 IS / SX120 IS / SX110 IS	PowerShot D10	PowerShot A3300 IS / A3200 IS / A2200 / A3100 IS / A3000 IS	PowerShot A2100 IS / A1100 IS / E1 / A2000 IS / A1000 IS	PowerShot A1200 / A800 / A495 / A490 / A480 / A470	IXUS 1000 HS	IXUS 310 HS / 300 HS	IXUS 200 IS / 210 IS / 105 IS / 95 IS / 85 IS	IXUS 220 HS / 115 HS / 130 / 120 IS / 110 IS / 100 IS	Digital IXUS 990 IS / 980 IS / 970 IS / 870 IS
GENOPLADELIGE BATTERIER																
	NB-7L	NB-2LH	NB-6L	NB-7L	NB4-300*	NB-5L	NB4-300*	NB-6L	NB-8L	NB4-300*	NB4-300*	NB-9L	NB-6L	NB-6L	NB-4L	NB-5L
BATTERIPLADERE																
	CB-2LZE	CB-2LWE	CB-2LYE	CB-2LZE	CBK4-300**	CB-2LXE	CBK4-300**	CB-2LYE	CB-2LAE	CBK4-300**	CBK4-300**	CB-2LBE	CB-2LYE	CB-2LYE	CB-2LVE	CB-2LXE
STRØMADAPTERKIT																
	ACK-DC50	ACK-DC20	ACK-DC40	ACK-DC50	CA-P5700	ACK-DC30	ACK 800	ACK-DC40	ACK-DC60	ACK 800	ACK 800	ACK-DC70	ACK-DC40	ACK-DC40	ACK-DC60 / ACK-DC10 (23)	ACK-DC30
KONVERTEROBJEKTIVER / OBJEKTIVADAPTERE																
Objektivadapter	LA-DC58K	LA-DC58H														
Filteradapter	FA-DC58B			FA-DC67A												
Objektivhætte				LH-DC60												
TELEKONVERTERE																
	TC-DC58D	TC-DC58C														
VIDVINKELKONVERTERE																
		WC-DC58B														
FLASH-TILBEHØR																
High Power Flash	HF-DC1	HF-DC1	HF-DC1			HF-DC1	HF-DC1	HF-DC1	HF-DC1	HF-DC1	HF-DC1	HF-DC1	HF-DC1 (28)	HF-DC1 (21)	HF-DC1 (29)	HF-DC1
Kompatibel med 580EX / 580EX II / 430EX / 430EX II / 270EX / 220EX	Ja	Ja	Ja	Ja												
Makroring	MR-14EX															
Macro Twin Lite	MT-24EX															
Speedlite-transmitter	ST-E2	ST-E2	ST-E2	ST-E2	ST-E2											
Off Camera Shoe Cord (flashkabel)	OC-E3	OC-E3	OC-E3	OC-E3												
Beslag	BKT-DC1															
Speedlite-beslag	SB-E2			SB-E2												
BLØDE ETUIER																
SC-serien	SC-DC65A (2) SC-DC60A (3)	SC-DC55A						SC-DC70								
DCC-serien	DCC-1600 (1) DCC-660 (2) DCC-650 (3)	DCC-600	DCC 1450 (4) DCC 1400 (5)	DCC-850	DCC-800	DCC 1500 DCC 1000 (6)	DCC-750		DCC-480 DCC-510 (24)	DCC-85 DCC-900 (11)	DCC-480 DCC-450 (8) DCC-490 (25)	DCC-1700	DCC-70 DCC-1700	DCC-1100 (9) DCC-60	DCC-1200 DCC-1100 (10) DCC-60 (19)	DCC-70 DCC-75 (11)
VANDTÆTTE KAMERAHUSE / UNDERVANDSHUSE																
	WP-DC34 (2) WP-DC28 (3)	WP-DC21	WP-DC38 (4) WP-DC35 (5)											WP-DC36 (12) WP-DC29 (13) WP-DC23 (14)	WP-DC37 (15) WP-DC33 (16) WP-DC32 (17) WP-DC31 (18) WP-DC39 (19) WP-DC310L (19) WP-DC320L (26)	WP-DC26 (11) WP-DC27 (22)
VÆGT TIL UNDERVANDSHUS																
	WW-DC1	WW-DC1	WW-DC1											WW-DC1	WW-DC1	WW-DC1

* 4 genopladelige AA-batterier uden oplader
** Sættet består af oplader og 4 genopladelige AA-batterier

Digitale kompaktkameraer

Kompatibilitetsoversigt for tilbehør

Forår/sommer 2011

TILBEHØR TIL DIGITALE KOMPAKTKAMERAER	PowerShot G12 / G11 / G10	PowerShot G9	PowerShot S95 / S90	PowerShot SX30 IS	PowerShot SX1 IS / SX10 IS / SX20 IS	PowerShot SX230 HS / SX220 HS / SX210 IS / SX200 IS	PowerShot SX130 IS / SX120 IS / SX110 IS	PowerShot D10	PowerShot A3300 IS / A3200 IS / A2200 / A3100 IS / A3000 IS	PowerShot A2100 IS / A1100 IS / E1 / A2000 IS / A1000 IS	PowerShot A1200 / A800 / A495 / A490 / A480 / A470	IXUS 1000 HS	IXUS 310 HS / 300 HS	IXUS 200 IS / 210 IS / 105 IS / 95 IS / 85 IS	IXUS 220 HS / 115 HS / 130 / 120 IS / 110 IS / 100 IS	Digital IXUS 950 IS / 980 IS / 970 IS / 870 IS
DIVERSE																
Karabinrem								STP-DC2								
Front Cover Set								FC-DC1								
Skulder- og nakkerem								STP-DC1								
AV-kabel	AVC-DC400 AVC-DC400 ST (1)	AVC-DC300	AVC-DC400 AVC-DC400ST (4)	AVC-DC400ST	STV-250N	AVC-DC400 (6) AVC-DC400ST	AVC-DC400 AVDC-400ST (30)	AVC-DC400	AVC-DC400	AVC-DC300	AVC-DC300	AVC-DC400ST	AVC-DC400ST	AVC-DC400	AVC-DC400 AVC-DC400ST (26)	AVC-DC400
Digital IXUS læderrem												Ja	Ja	Ja	Ja	Ja
Digital IXUS metalrem												Ja	Ja	Ja	Ja	Ja
HDMI-kabel HTC-100	HTC-100 (1)		HTC-100	HTC-100	HTC-100 (27)	HTC-100						HTC-100	HTC-100	HTC-100 (20)	HTC-100	
Fjernlæser	RS-60E3															
Ringtilbehørsæt	RAK-DC2	RAK-DC1														
USB-interfacekabel	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU	IFC-400PCU

- 1 Kun PowerShot G12
- 2 Kun PowerShot G12 & G11
- 3 Kun PowerShot G10
- 4 Kun PowerShot S95
- 5 Kun PowerShot S90
- 6 Kun PowerShot SX210 IS
- 7 Kun PowerShot E1
- 8 Kun PowerShot A470
- 9 Kun IXUS 210 IS og IXUS 200 IS
- 10 Kun IXUS 110 IS
- 11 Kun IXUS 870 IS
- 12 Kun IXUS 105 IS
- 13 Kun IXUS 95 IS
- 14 Kun IXUS 85 IS
- 15 Kun IXUS 130 (ikke alle funktioner understøttes)
- 16 Kun IXUS 120 IS
- 17 Kun IXUS 110 IS
- 18 Kun IXUS 100 IS
- 19 Kun IXUS 115 HS
- 20 Kun IXUS 210 IS
- 21 Ikke til IXUS 210 IS
- 22 Kun IXUS 980 IS
- 23 Kun IXUS 115 HS og IXUS 220 HS
- 24 PowerShot A3300 IS, PowerShot A3200 IS og PowerShot A2200
- 25 Kun PowerShot A1200 og PowerShot A800
- 26 IXUS 220 HS
- 27 Kun PowerShot SX1 IS og PowerShot SX20 IS
- 28 Kun IXUS 300 HS
- 29 Ikke til IXUS 220 HS
- 30 PowerShot SX130 IS

PRINTERTILBEHØR TIL SELPHY KOMPAKTE FOTOPRINTERE	SELPHY ES40 / ES30 / ES3	SELPHY CP800	SELPHY CP790 / CP780 / CP770 / CP760	SELPHY CP750 / CP730	SELPHY CP740 / CP720 / CP710 / CP530 / CP520
BLUETOOTH-ADAPTER					
BU-20	●	●	● 1	●	●
BU-30	●	●	● 2	●	●
BÆRETASKE					
DCC-CP1			●	●	●
DCC-CP2		●	●	●	●
DCC-ES1	●				
GENOPLADELIGE BATTERIER					
NB-CP2L		●	● 3	●	●
PAPIRKASSETTER					
PCL-CP300 / PCL-CP200 / PCL-CP100		●	●	●	●
PCC-CP300 / PCC-CP100		●	●	●	●
PRINTMEDIER TIL ES-SERIEN					
E-P100 / E-P50	●				
E-LS0	●				
E-C25	●				
E-C25L	●				
E-P25BW	●				
PRINTMEDIER TIL CP-SERIEN					
KP-36IP		●	●	●	●
KP-72IN		●	●	●	●
KP108IN		●	●	●	●
KL-36IP		●	●	●	●
KC-36IP		●	●	●	●
KC-18IL		●	●	●	●
KC-18IF		●	●	●	●

- 1 Til SELPHY CP780
- 2 Til SELPHY CP760
- 3 Til SELPHY CP790 / 780 / 770

Canon

0152W812